



www.micronicsflowmeters.com

USER'S GUIDE

Installation & Operation
Instructions

Area-Velocity Flow Meter
Model UF AV5000
Manual Series B.1.4



UF AV5000 Area-Velocity Flow Meter

Note: This page has been left blank intentionally.



INDEX

CONNECTIONS	4
FUNCTION TEST	4
KEYPAD SYSTEM.....	6
CALIBRATION MENU	8
MESSAGE	9
STATUS	9
PASSWORD.....	10
UNITS/MODE	11
CALIBRATION.....	12
RELAY PARAMETERS	16
SPECIAL FUNCTIONS	17
INSTALLATION - SENSOR LOCATION	19
ENCLOSURE INSTALLATION	23
FIELD TROUBLESHOOTING.....	24
APPLICATIONS HOTLINE	26
PRODUCT RETURN PROCEDURE.....	27
AREA-VELOCITY FLOW DATA SHEET	28
APPENDIX A – OPTIONS.....	31
DATA LOGGING (OPTIONAL).....	36
SPECIFICATIONS	39

IMPORTANT NOTE: This instrument is manufactured and calibrated to meet product specifications. Please read this manual carefully before installation and operation. Any unauthorized repairs or modifications may result in a suspension of the warranty.

Available in Adobe Acrobat pdf format

CONNECTIONS:

POWER INPUT: 100 to 240 VAC 50/60Hz. No adjustments are necessary for voltages within this range. Connect L (Live) N (Neutral) and AC Ground.

Optional DC: 9-32 VDC. Connect to + and -terminals.

Optional Thermostat and Heater modules are available rated for 115 VAC or 230 VAC.

IMPORTANT NOTE: AC power input and relay connection wires must have conduit entry to the instrument enclosure. Installation requires a switch, overcurrent fuse or circuitbreaker in the building (in close proximity to the equipment) that is marked as the disconnect switch.

! Risk of electric shock. Loosen cover screw to access connections. Only qualified personnel should access connections.



Note: Use of instrumentation over 40°C ambient requires special field wiring.

Note: User replaceable fuse is 2 Amp 250V (T2AL250V).


FUNCTION TEST:

Connect the sensor to the **TDCR** terminals as shown below, then apply power. Allow 30 seconds for the UF AV5000 to initialize.

- A. Place QZ02L sensor (flat to the bottom) in a bucket of water about 6" deep and select Level mode (from UNITS/MODE menu) to see a level reading.
- B. Select Velocity mode and stir the water to see a velocity reading.

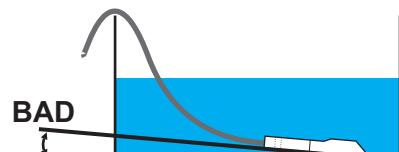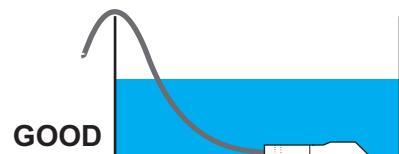


CONNECTIONS

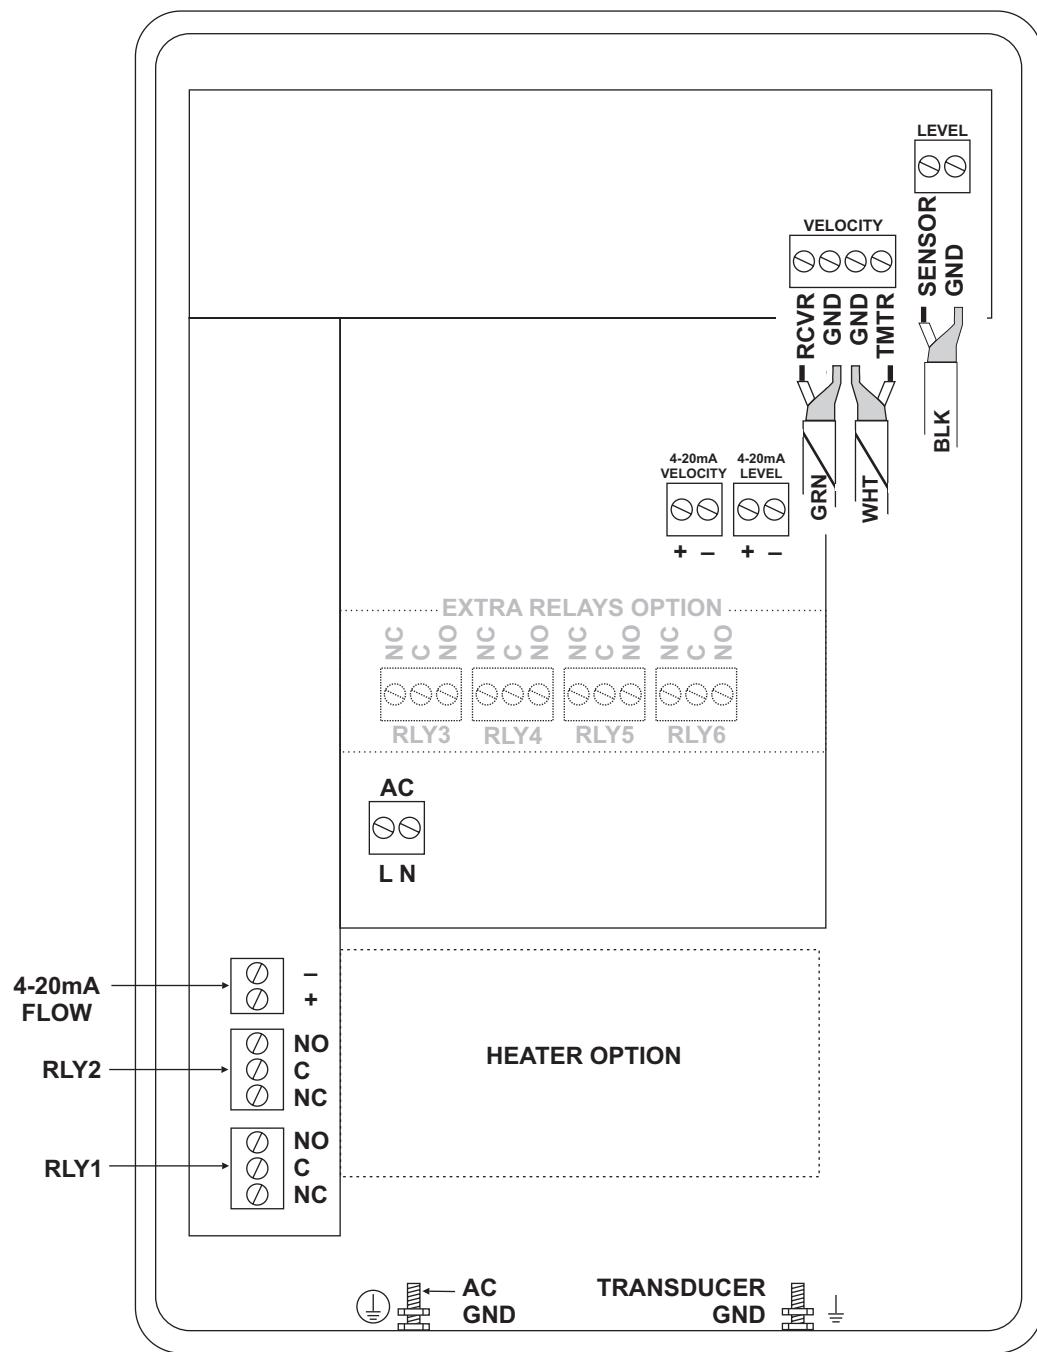

KEYPAD SYSTEM

The UF AV5000 uses a menu system. Arrows show the four directions to leave a menu box. Pressing a corresponding keypad arrow will move to the next item in the direction shown. Move the cursor (underline) under numerals and increase or decrease numerals with the **↑** and **↓** keys.


To store calibration values permanently (even through power interruptions), press **✓**.

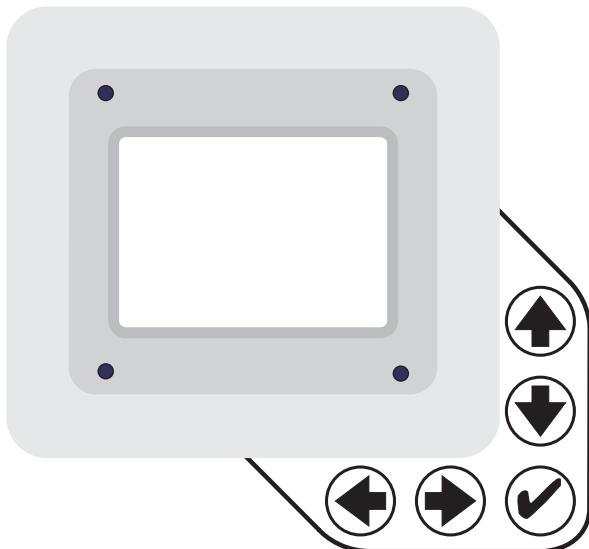



UF AV5000 Area-Velocity Flow Meter

CALIBRATION MENU

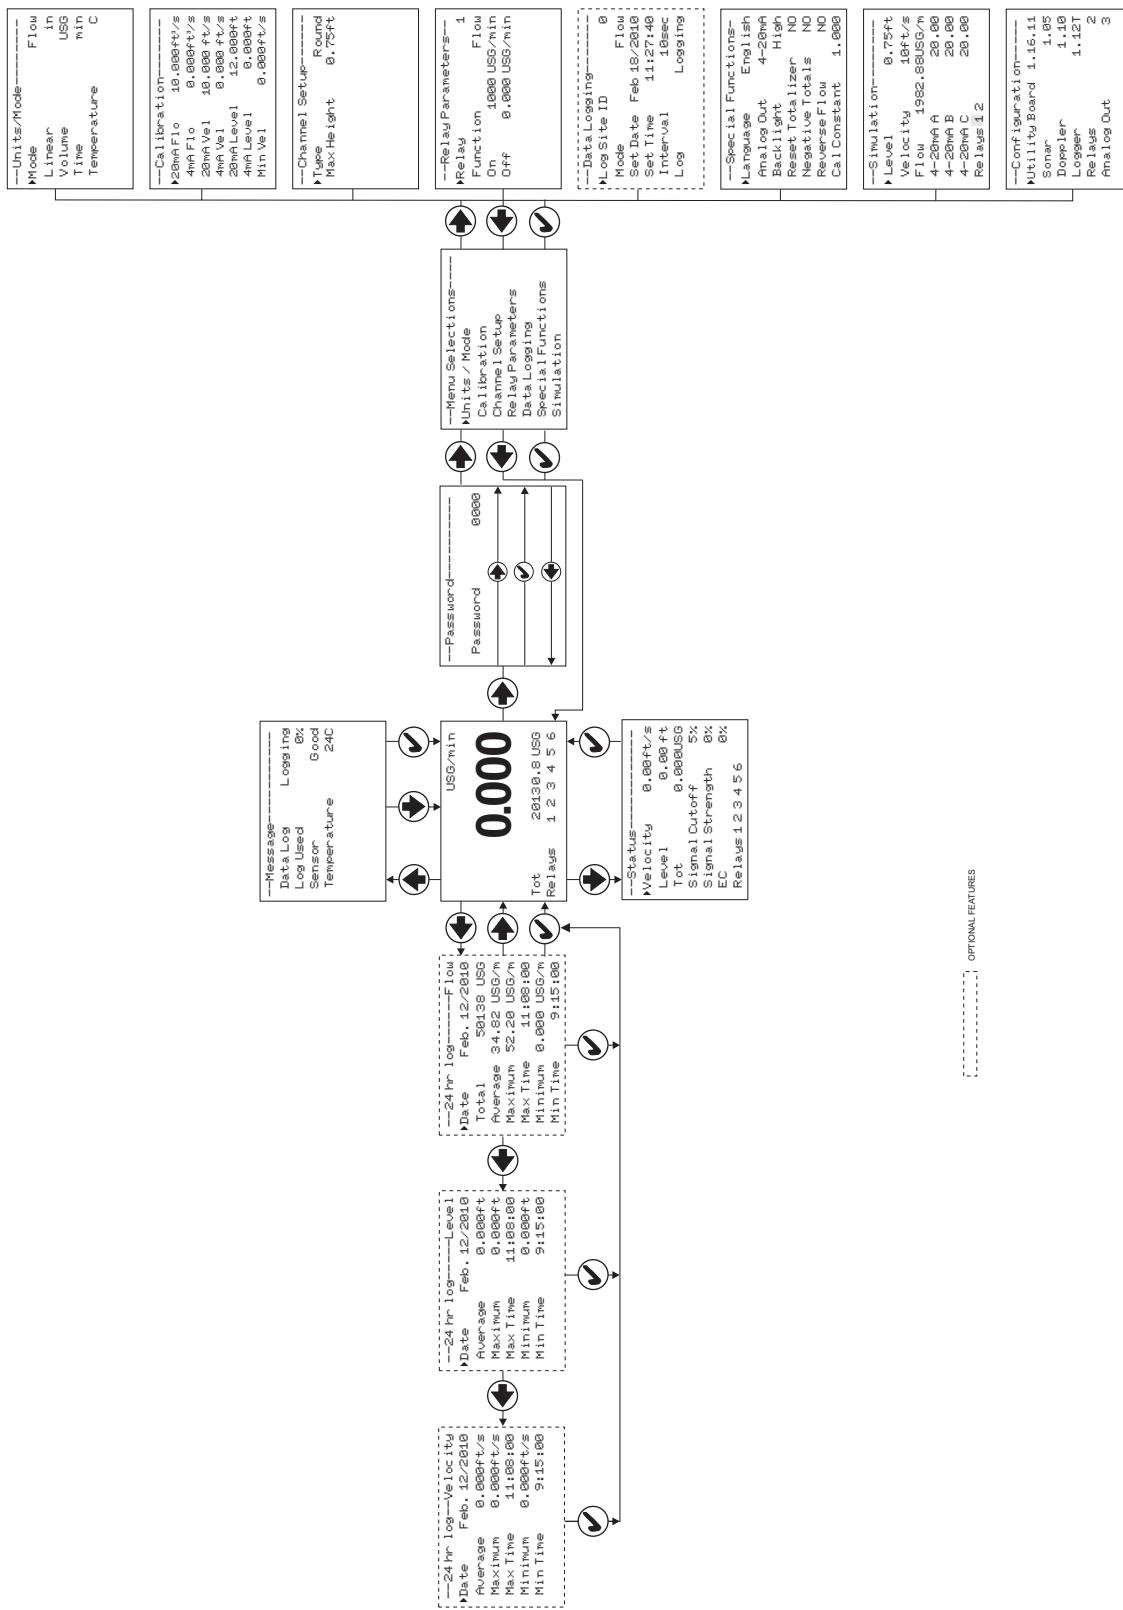




RUN

The main display shows the units selected from the Units/Modemenu, Flow or Velocity rate being measured, TOTALIZER and RELAY states. The UF AV5000 will start-up with this display and will return to this screen after a timeout if keys are not pressed in other menus.



MESSAGE

Press **↑** from the RUN display to view temperature measurement, status of the data logger and error/warning messages provided by the instrument. The word Message will appear on the RUN display if error messages are being generated by the instrument. Refer to the manual section Error/Warning Messages for a description. Press **✓** to return to the main display.

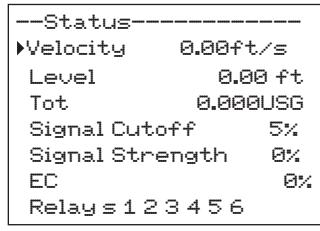

STATUS


Press **↓** from the RUN display to view instrument status.

Velocity	Will be displayed in ft/sec or m/sec.
Level	Is displayed in the selected units.
Tot	Displays the current totalizer reading.
Signal Cutoff	Adjust the setting in percent to suppress flow readings at zero flow when fluid swirling or pipe vibration may cause the instrument to continue reading. Example: Signal Cutoff at 5% will force the display and outputs to zero when signal strength drops below 5%.
Signal Strength	Displays percentage of signal being received by the ultrasonic sensor.
EC	Displays level measurement Echo Confidence
Relays 1 2 3 4 5 6	Energized relays will display with reversed font eg: 2

```
--24 hr log-----Flow
►Date Feb. 12/2010
Total 50138 USG
Average 34.82 USG/m
Maximum 52.20 USG/m
Max Time 11:08:00
Minimum 0.000 USG/m
Min Time 9:15:00
```

24 HR LOG (Data Logging option only)

Press **◀** from the RUN display to view a formatted flow report from instruments with a built-in data logger. Press **◀** to pan through Level, Velocity and Flowsummaries. Press **▼** to scroll down one day or repeatedly to scroll to a specific date. Up to 365 days can be stored. Newest date will overwrite the oldest. Press **✓** to return to the main display.

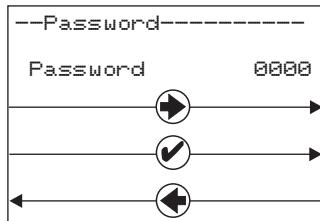

PASSWORD

The Password (a number from 0000 to 9999) prevents unauthorized access to the Calibration menu.

From the Run display press **►** to get to Password. Factory default password is 0000 and if it has not been changed press **✓** to proceed to the Menu Selectionsscreen.

If a password is required, press **►** to place the cursor under the first digit and **▼** or **▲** to set the number, then **►** to the second digit, etc. Press **►** or **✓** to proceed to the Menu Selectionsscreen.

A new password can be stored by going to Special Functions/New Password.



--Units/Mode-----	
►Mode	Flow
Linear	in
Volume	USG
Time	min

UNITS/MODE

From ►Mode press the ► and then the ↑ or ↓ to select Flow or Velocity. Flow mode displays the flow rate in engineering units (e.g. gpm, litres/sec, etc.) Press the ✓ to store your selection then the ↓ to the next menu item.

From ►Linear press the ► key and then the ↑ or ↓ to select your units of measurement. Press the ✓ to store your selection.

Press the ↓ key to move the ► symbol to each subsequent menu item and the ✓ to save your selections.

Note: the volume selection "bbl" denotes U.S. barrels.

►Temperature press ► then ↑↓ to select CorF.

Press ← or ✓ to return to the Menu Selections screen.

--Units/Mode-----	
►Volume	USG
	ft ³
	bbl
	L
	m ³
	IMG
	IG
	USMG

--Units/Mode-----	
Mode	Flow
Linear	in
Volume	USG
►Time	sec
	day
	hr
	min

--Units/Mode-----	
►Mode	Flow
Linear	in
Volume	USG
Time	min
Temperature	C



```
--Calibration-----  
►20mA Flo    10.000ft³/s  
4mA Flo     0.000ft³/s  
20mA Vel    10.000ft/s  
4mA Vel     0.000ft/s  
20mA Level   12.000ft  
4mA Level    0.000ft  
Min Vel     0.000ft/s  
Min Level   0.003ft  
Lvl Offset   0.000ft  
Damping      10%  
LOE Time     30sec
```

CALIBRATION

Press ↓ to Calibration and ► to enter. Use ↓ or ↑ to position ► before each menu item and ► to enter. When settings are completed press ✓ to store and return to the Calibration menu.

20mA Flo Press ► and enter the flow rate value for 20mA.
[5V Flo]

Note: Analogue output can be selected as 4-20mA or 0-5V in Special Functions.

4mA Flo Press ► and enter the flow rate value for 4mA.
[0V Flo]

20mA Vel Press ► and enter the velocity value for 20mA.
[5V Vel]

4mA Vel Press ► and enter the velocity value for 4mA.
[0V Vel]

20mA Level Optional for QZ02L-A type transducer. Press ► and enter the level value for 20mA.
[5V Level]

4mA Level Optional for QZ02L-A type transducer. Press ► and enter the level value for 4mA.
[0V Level]

MaxRg Only for PZ12LP/QZ02L-B type transducer. Press ► and enter the zero water level (distance from the PZ12-LP sensor to the zero water level).

MinRg Only for PZ12LP/QZ02L-B type transducer. Press ► and enter the max level (distance from the PZ12-LP sensor to the max water level).


Min Vel Press ► and enter a minimum velocity cutoff. Forward and reverse velocities less than Min Vel will be forced to zero.

Min Level Optional for QZ02L-A type transducer. Press ► and enter a minimum level cutoff. Level reading less than Min Level will be forced to zero.

Lvl Offset

Optional for QZ02L-A type transducer. Press ➤ and enter an offset to level measurement. Set to 0.00 when sensor mounted on floor of channel. When sensor is mounted above the floor of the channel enter the distance between channel floor and bottom of sensor.

Note: 4mA is not affected by Lvl Offset settings. 4mA is the bottom of the channel or pipe.

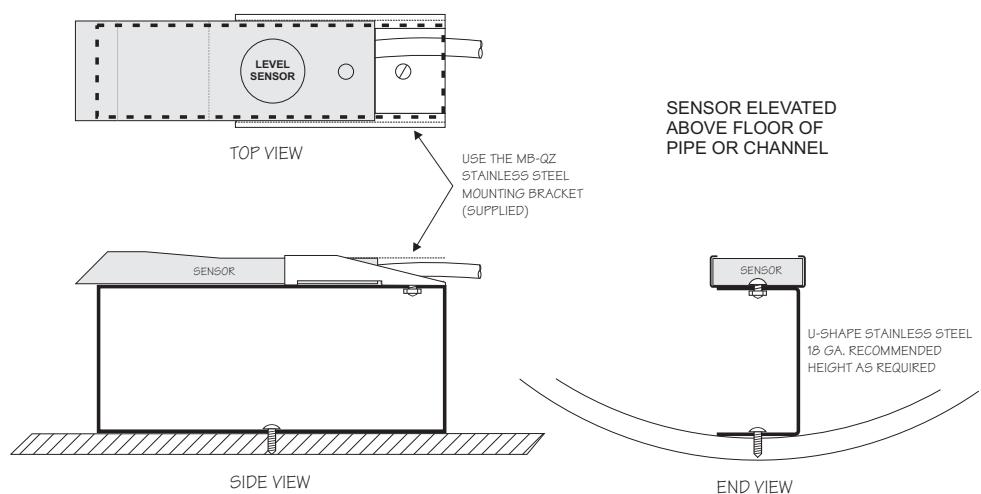

Damping

Increase damping to stabilize readings under turbulent flow readings or to reject spurious level readings. Decrease for faster response to changes in flow.

LOE Time


Press ➤ and enter the number of seconds allowed without receiving an echo before the UF AV5000 displays ECHO LOSS, and Control relays change state as calibrated under Relay Parameters.

Press ✓ from the Calibrationdisplay to return to Menu Selections.


--Channel Setup-----	
Type	Round
Max Height	0.75ft

CHANNEL SETUP

- Round Select Round for open pipes. Set Max Height to the inner diameter of the pipe.
- Rectangle Select Rectangle for rectangular channels. Enter the channel width.
- Trapezoid Select Trapezoid for trapezoidal shaped channels. Specify the Width and Slope of the channel as shown in the following illustration.

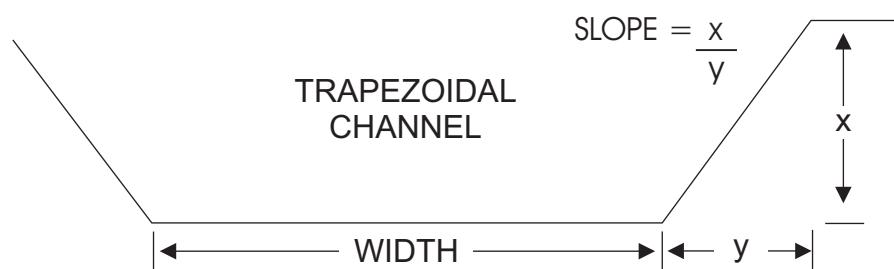


- Egg Select Egg for Egg shaped channels. Enter the Max Height of the channel.

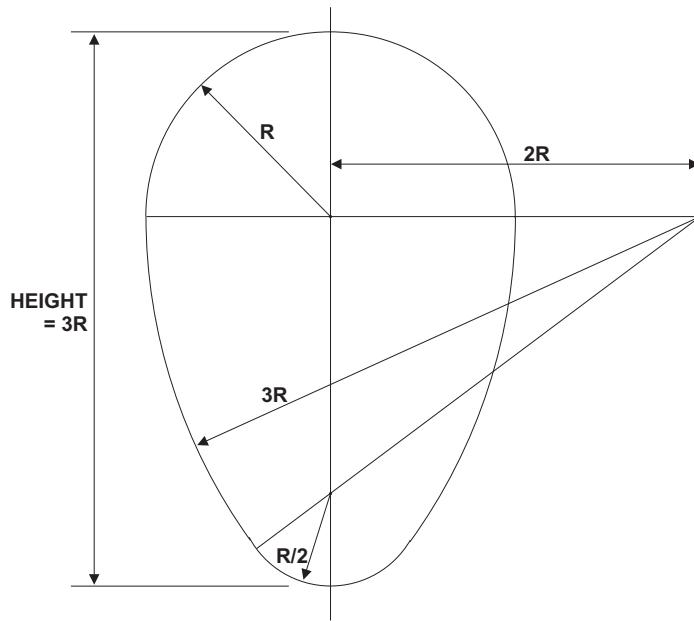

--Custom Channel-----	
Type	Custom
Reset Data	No
Max Height	0.75 ft
Division	0.05 ft
Increment #	0
Width	0.000 ft
Level	0.000 ft

CUSTOM CHANNELS

- Reset Data Old data **MUST** be removed before entering data for a new channel. Press **►** then press **↑** to Yes and press **✓** to clear old data.
- Max Height Enter the maximum height of the channel.
- Division Divide the maximum height into equal increments (maximum of 40) and enter this division value (example 1", 1 cm etc.)
- Increment # Enter the increment number if you want to edit a previous entry or to skip entering widths for some levels (Note: The custom channel will interpolate widths between entry points).
- Width Enter the measured width of the channel at the level shown (Note: To enter 0 width you must press **►** and then **✓** to store a 0 width data point).
- Level Displays the level of the channel for each increment and width entry.

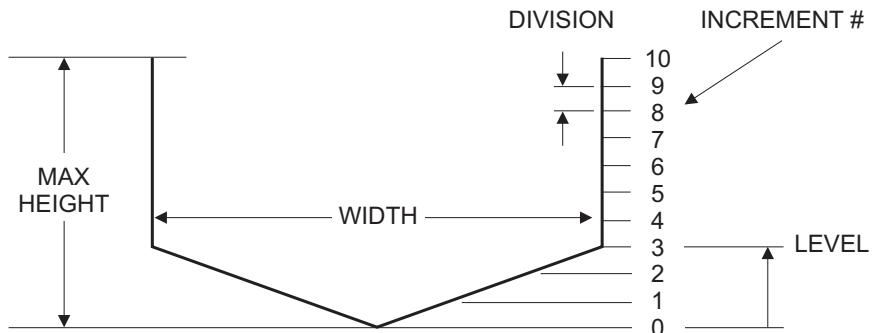

Note:

Custom channel data in equal width increments with variable height measurements must be converted to the format shown above using the "Channel Data Translator" PC software.



```
--Relay Parameters--  
►Relay 1  
Function Flow  
On 1000 USG  
Off 0.000 USG
```

RELAY PARAMETERS

- Relay Press ➡ and ↓ or ↑ to select a relay (2 relays are standard, 4 additional are optional).
- Function Press ↓ or ↑ to select Off, Pulse, Flow, Velocity or Level.
- Flow On Position the cursor under the numerals and press ↓ or ↑ to set digits to the relay On set point.
Off set digits to the Off set point.
- Pulse Press ↓ and set digits to the flow volume per relay pulse. Use this feature for remote samplers, chlorinators or totalizers. Minimum time between pulses is 2.25 seconds and pulse duration is 350 milliseconds.
- VelocityOn Return to Relay and enter settings for each relay.
- Position the cursor under the numerals and press ↓ or ↑ to set digits to the relay On set point.
Off set digits to the Off set point.
- LevelOn Position the cursor under the numerals and press ↓ or ↑ to set digits to the relay On set point.
Offset digits to the Off set point.
LOE mode Specify the state of the relay for loss of echo condition: Off, On or Hold.

Press ✓ to return to Menu Selections

**DATA LOGGING (OPTIONAL)**

Refer to Options section of this manual.

--Special Functions-	
►Language	English
Analog Out	4-20mA
Backlight	High
Reset Totalizer	NO
Negative Totals	NO
Reverse Flow	NO
Cal Constant	1.000

SPECIAL FUNCTIONS

--Special Functions-	
►Language	English
►Backlight	High
	Medium
	Low
Key Hi/Lo	
Key High	
Key Med	
Key Low	
Off	

Language	Select English, French or Spanish
Analog Out	Select 4-20mA or 0-5V mode for the analog output.
Backlight	Select High, Medium or Low for continuous backlight.
Reset Totalizer	Select KeyHi/Lo for high backlight (for 1 minute) after a keypress and then Lo backlight until a key is pressed again.
Negative Totals	Select KeyHigh, Med or Low for backlight after a keypress and then backlight off until a key is pressed again.
Reverse Flow	Press ➤ and select Yes to invert the sign of the flow measurement.
Cal Constant	Scales the velocity reading. Set to 1.000 for QZ02L transducer.
Restore Defaults	Select Yes and press ✓ to erase all user settings and return the instrument to factory default settings.
New Password	Select any number from 0000 to 9999 and press ✓. Default setting of 0000 will allow direct access to the calibration menus. Setting of any password greater than 0000 will require the password to be entered to access the calibration menus.

Press ✓ to return to Menu Selections.



```
--Simulation-----  
► Level      0.75ft  
Velocity     10ft/s  
Flow        1982.88USG/m  
4-20mA A    20.00  
4-20mA B    20.00  
4-20mA C    20.00  
Relays 1 2
```

SIMULATION

Simulate a level reading and a velocity reading (Press ► to change value and ✓ to store).

Review the resulting Flow reading, the three analog outputs (A: Flow, B: Velocity, C: Level) and the relay states. Note: Outputs will follow the displayed values.

Exercises the 4-20mA output, digital display and control relays (does not affect the totalizer or optional data logger).

Press the ✓ to terminate simulation and return to the Menu Selections screen.

INSTALLATION - SENSOR LOCATION


1. Choose a sensor mounting location where silt or deposits are least likely to accumulate.
2. For best results flow should be evenly distributed across the channel and relatively free of turbulence. (The UF AV5000 is very effective at averaging level and velocity readings in turbulent conditions, but best accuracy and response time is achieved with evenly distributed flow.)
3. Avoid vertical drops, obstructions or elbows immediately up and downstream from the sensor. Locate the QZ02L sensor at least 10 times maximum Head (level) and 10 times the channel width from these flow disturbances.

QZ02L VELOCITY-LEVEL SENSOR MOUNTING




Mount the QZ02L sensor with the stainless steel bracket and hardware supplied. Ensure that the sensor is parallel to the water surface (check with a level). Mount with the tapered end of the sensor pointing upstream and the sensor cable pointing downstream.

Clip or tie wrap the sensor cable securely to the pipe or channel wall.





Note: The mounting bracket is designed to release the sensor if weeds or rags are caught by the sensor.

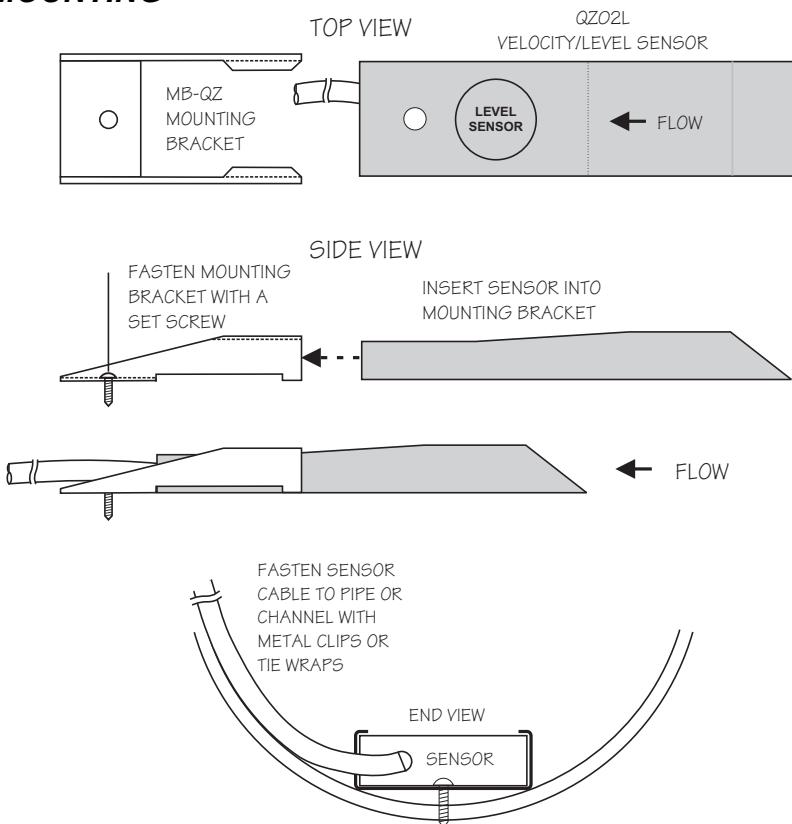

GOOD

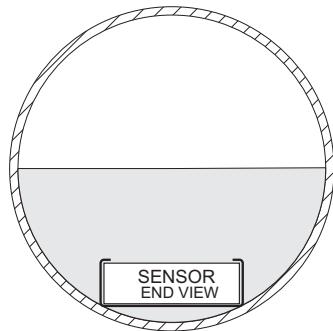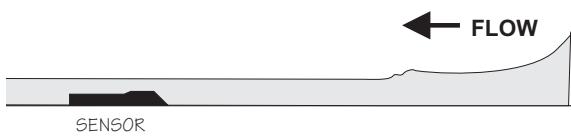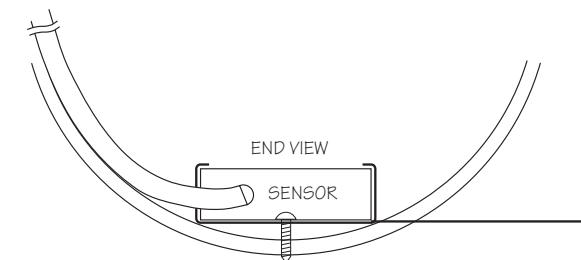


BAD

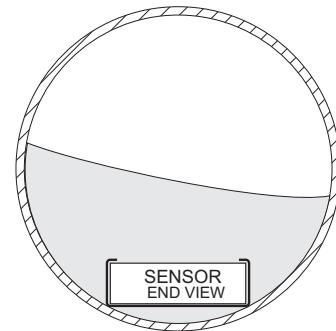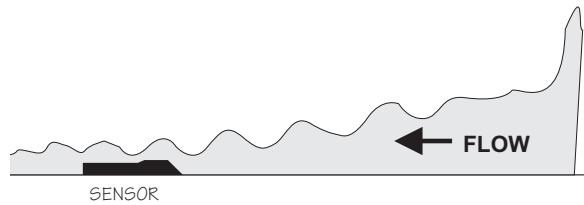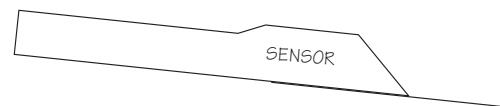
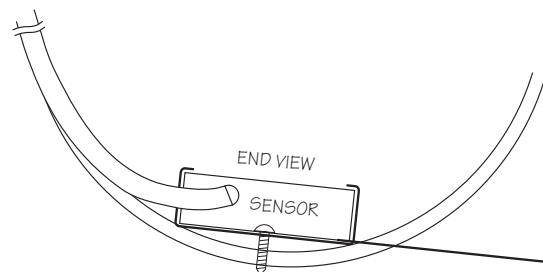


OPTIONAL PIPE BAND MOUNTING WITH QZ02L SENSOR

Install the stainless steel pipe band with the sensor mounting bracket at the invert (bottom) of the pipe. Ensure that the sensor bracket is parallel to the water surface (check with a level). Mount so the tapered end of the sensor will point upstream and the sensor cable will point downstream. (Turn the $\frac{1}{4}$ " adjustment nut clockwise to expand the bracket and secure to the pipe wall by friction fit.)

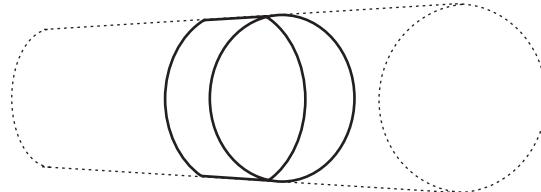

Insert the sensor into the mounting bracket and tie-wrap the sensor cable securely to the pipe band using the holes provided.

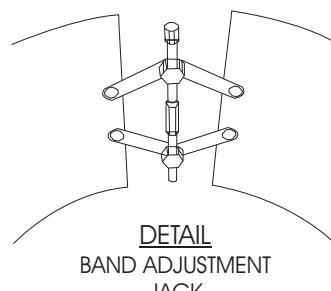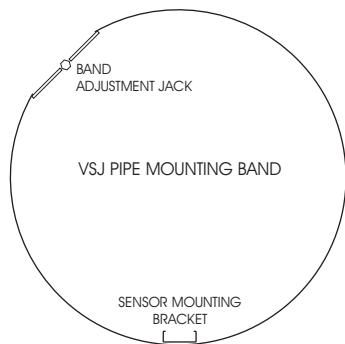


OPTIONAL QZ02L-DP VELOCITY SENSOR MOUNTING


Mount the velocity sensor at or near the bottom of the channel or pipe in a position where it will be continuously submerged. The QZ02L-DP velocity sensor does not have to be parallel to the water surface. Position where silt or solids will not build-up on the sensor.

OPTIONAL PZ12-LP LEVEL SENSOR MOUNTING


Mount the PZ12-LP non-contacting ultrasonic level sensor in an unobstructed position at least 203.2mm (8") above the high water level. Install the stainle ss steel mounting bracket in a horizontal position (check with a level) and then insert the PZ12-LP sensor.

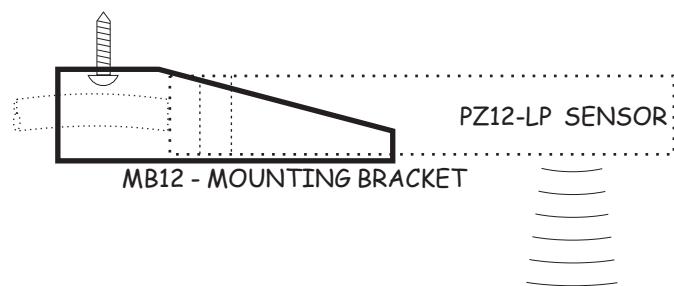

PZ12-LP MANHOLE MOUNTING

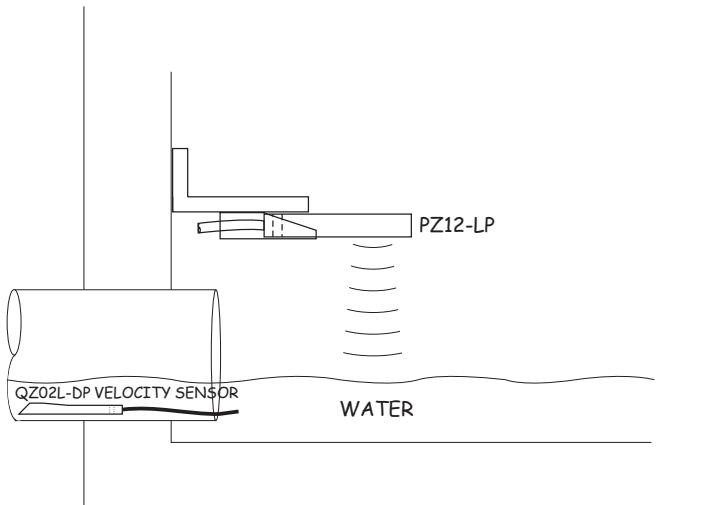

PZ12-LP PIPE MOUNTING

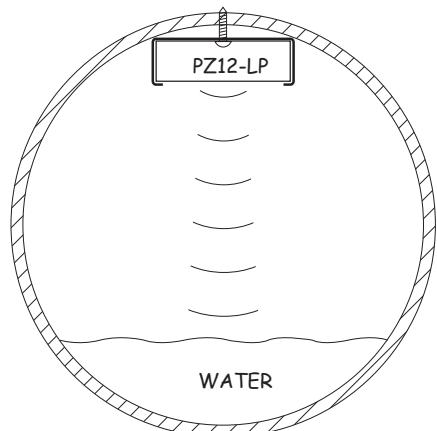

ENCLOSURE INSTALLATION

Locate the enclosure within 6 m (20 ft) of the sensor (up to 150 m - 500 ft optional). The enclosure can be wall mounted with the four mounting screws (included) or panel mounted with Option PM Panel Mount kit from Micronics Limited.

Avoid mounting the enclosure in direct sunlight to protect the electronics from damage due to overheating and condensate. In high humidity atmospheres, or where temperatures fall below freezing, Option TH Enclosure Heater and Thermostat is recommended. Seal conduit entries to prevent moisture from entering enclosure.


NEMA4X (IP66) WITH CLEAR COVER

1. Open hinged enclosure cover.
2. Insert #8 screws (supplied) through the four enclosure mounting holes to secure the enclosure to the wall or mounting stand.

Additional conduit holes can be cut in the bottom of the enclosure with a hole saw or Greenlee-type hole cutter.

DO NOT make conduit/wiring entries into the top of the enclosure.

Note: This non-metallic enclosure does not automatically provide grounding between conduit connections. Grounding must be provided as part of the installation. Ground in accordance with the requirements of the National Electrical Code. System grounding is provided by connecting grounding wires from all conduit entries to the steel mounting plate or another point which provides continuity.

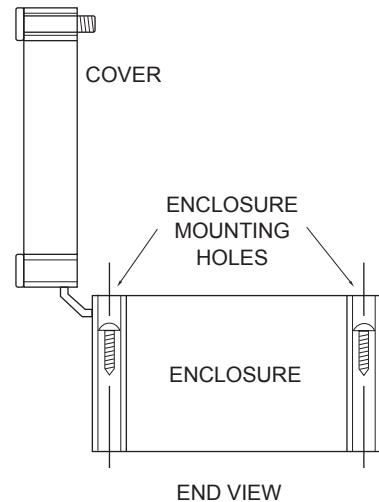

CLEANING

Cleaning is not required as a part of normal maintenance.



FIELD TROUBLESHOOTING

The UF AV5000 uses an ultrasonic level sensor to determine channel AREA and an ultrasonic Doppler sensor to measure flow VELOCITY.

The QZ02L transducer combines both sensors in one housing.

An optional configuration uses the PZ12-LP “down-looking” level sensor and a QZ02L-DP velocity sensor.

To troubleshoot the UF AV5000, verify correct operation of LEVEL and VELOCITY measurements separately.

Note: Selecting “Defaults” in the SPECIAL FUNCTION menu will return the instrument to “as-shipped” factory settings.

LEVEL (QZ02L SENSOR)

SYMPTOMS

EC bar graph at zero

-Level display reads 1.0 inches

FAULTS

- very turbulent flow
- very aerated flow
- sensor not level
- sediment/dirt/grease build-up on sensor
- Level at or less than 1.0 inches

SOLUTIONS

- Increase LOE time (SPECIAL FUNCTION)
- relocate sensor or use PZ12-LP
- level sensor with “Bullseye” level
- clean sensor with liquid soap

VELOCITY (QZ02L SENSOR)

SYMPTOMS

- No velocity reading

FAULTS

- Grease/sediment on sensor
- Improper hook-up


SOLUTIONS

- Clean sensor with detergent
- Check sensor connections

SENSOR CABLE RESISTANCE TEST

Unplug the green sensor terminal from the Doppler board and connect the sensor wires as shown. With a multimeter, perform resistance checks for each set of wires. One single loose terminal may cause false readings.

Test across shield and core of each wire: TMTR (black/white) and RCVR (black). Resistance should be approximately 82.5K ohms for any cable length. High readings indicate an open circuit and low readings indicate a short or partial short in the sensor cable.

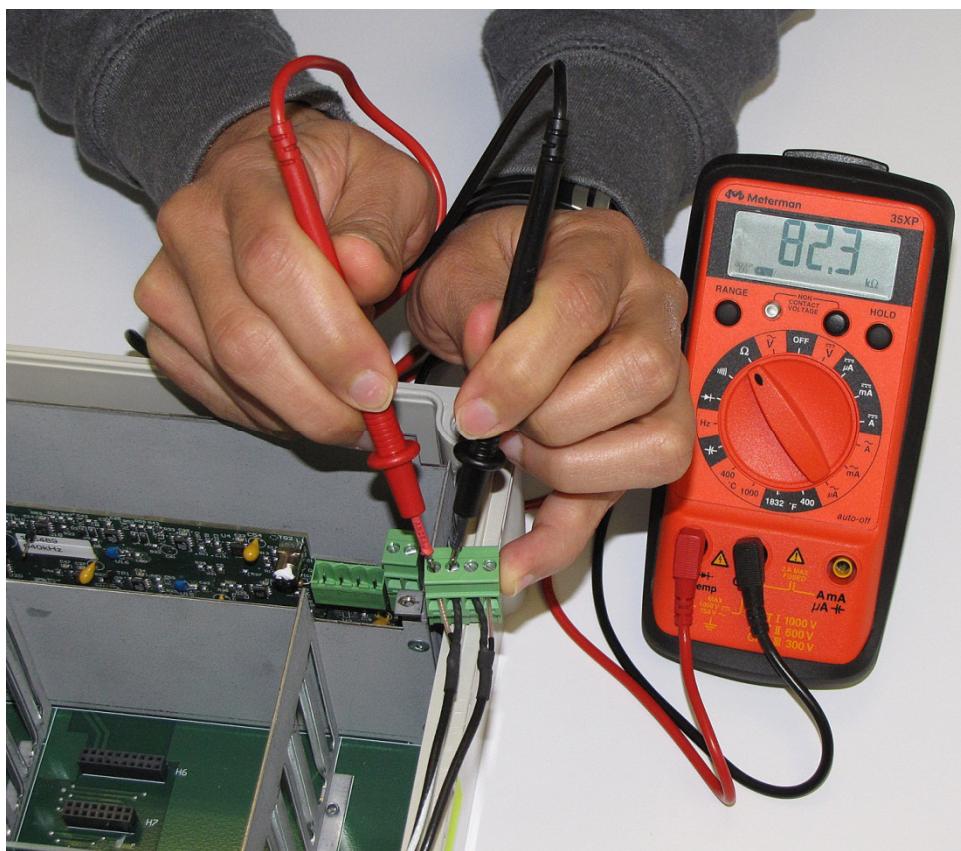



UF AV5000 Area-Velocity Flow Meter

APPLICATIONS HOTLINE

For applications assistance, advice or information on any Micronics Limited contact your Sales Representative, write to Micronics or phone the Applications Hotline below:

Tel: +44 (0)1628 810456 Fax: +44 (0)1628 531540

Email: sales@micronicsltd.co.uk

Web Site: www.micronicsflowmeters.com

Micronics Limited.
Knaves Beech Business Centre,
Davies Way, Loudwater,
High Wycombe, Buckinghamshire,
United Kingdom, HP10 9QR



PRODUCT RETURN PROCEDURE

Instruments may be returned to Micronics for service or warranty repair.

1) Obtain an RMA Number from Micronics -

Before shipping a product to the factory please contact Micronics by telephone, fax or email to obtain an RMA number (Returned Merchandise Authorization). This ensures fast service and correct billing or credit.

When you contact Micronics please have the following information available:

1. Model number / Software Version
2. Serial number
3. Date of Purchase
4. Reason for return (description of fault or modification required)
5. Your name, company name, address and phone number

2) Clean the Sensor/Product -

Important: unclean products will not be serviced and will be returned to the sender at their expense.

1. Rinse sensor and cable to remove debris.
2. If the sensor has been exposed to sewage, immerse both sensor and cable in a solution of 1 part household bleach (Javex, Clorox etc.) to 20 parts water for 5 minutes. Important: do not immerse open end of sensor cable.
3. Dry with paper towels and pack sensor and cable in a sealed plastic bag.
4. Wipe the outside of the enclosure to remove dirt or deposits.
5. Return to Micronics for service.

3) Ship to Micronics -

After obtaining an RMA number please ship the product to the appropriate address below:

Customers:

Micronics Limited.
Knaves Beech Business Centre,
Davies Way, Loudwater,
High Wycombe, Buckinghamshire,
United Kingdom, HP10 9QR

AREA-VELOCITY FLOW DATA SHEET

Micronics		<i>Please complete and return this form to Micronics. It is important. We use this information to check our database for performance of Micronics flow meters in similar applications, and to provide advice and recommendations to you. Thanks for your cooperation.</i>	
Contact:	_____ Title/Dept.: _____		
Company:	_____ Project: _____		
Address:	_____		
Tel:	_____ Fax: _____		
SENSOR:			
Model/Type:	_____		
Elec. Class:	_____		
Cable Length: _____ Type of Pump: _____			
Distance from nearest Pump, Controlling Valve, Orifice or open Discharge: _____			
INSTRUMENT:			
Model/Type:	_____		
Calibrated Range:	_____		
Operating Temp.:	_____		
Enclosure Class:	_____		
Elec. Class:	_____		
Power Input:	_____		
Indication:	_____		
Alarm:	_____		
Pulse/Unit:	_____		
Output:	_____		
SERVICE CONDITIONS:			
Pipe ID:	_____		
Pipe Mat'l:	_____		
Fluid:	_____		
Oper. Flow:	_____		
Max. Flow:	_____		
Min. Flow:	_____		
<input type="checkbox"/> Vertical		<input type="checkbox"/> Horizontal	
% Solids:		_____	
Material Build-up:		_____	
Vibration:		_____	
Max. Pressure:		_____	
Max. Temp:		_____	
Notes / Sketch Pipe Run:			



LIMITED WARRANTY

Micronics warrants, to the original purchaser, its products to be free from defects in material and workmanship for a period of one year from date of invoice. Micronics will replace or repair, free of charge, any Micronics product if it has been proven to be defective within the warranty period. This warranty does not cover any expenses incurred in the removal and re-installation of the product.

If a product manufactured by Micronics should prove defective within the first year, return it freight prepaid to Micronics along with a copy of your invoice.

This warranty does not cover damages due to improper installation or handling, acts of nature, or unauthorized service. Modifications to or tampering with any part shall void this warranty. This warranty does not cover any equipment used in connection with the product or consequential damages due to a defect in the product.

All implied warranties are limited to the duration of this warranty. This is the complete warranty by Micronics and no other warranty is valid against Micronics. Some states do not allow limitations on how long an implied warranty lasts or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.


Micronics Limited.

APPENDIX A – OPTIONS

EXTRA SENSOR CABLE (OPTION VXC)

Each Micronics UF AV5000 flow meter includes 7.6 m. (25 ft), 15 m. (50 ft) or 30 m. (100 ft) tri-coaxial sensor cable. This cable is shielded from electrical interference and is watertight with a polyurethane jacket. Additional cable and Cable Junction Box (Option VJB) may be ordered with the Flow Meter, or the cable may be spliced and extended up to 152 m (500 ft) total length as required during installation. No adjustment is required when the sensor cable is extended or shortened. Use only Micronics tri-coaxial VXC shielded cable, or run three RG174U coaxial cables in a metal conduit.

Extended sensor cable can be installed in conduit for mechanical protection. Recommended installation with a metal junction box is illustrated below:

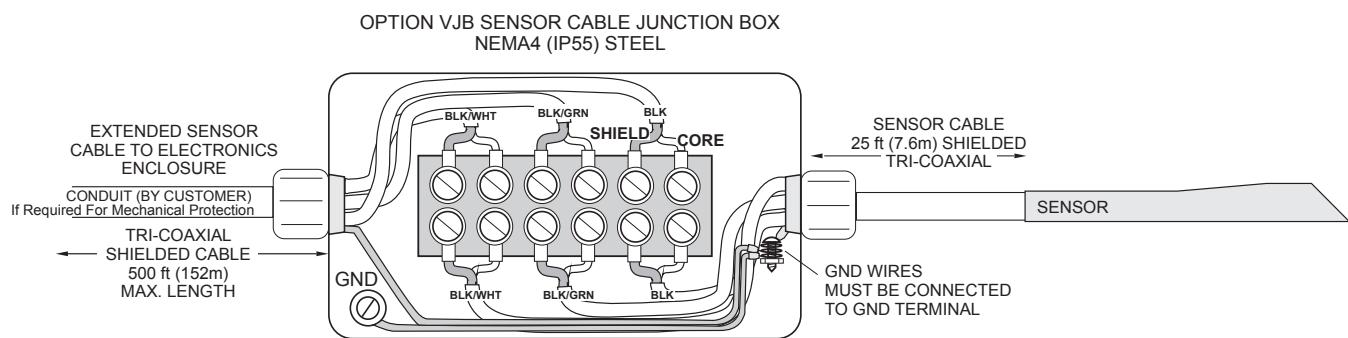

COAXIAL CABLE PREPARATION


VXC Doppler sensor cable can be cut and spliced up to a maximum length of 152 m (500 ft). Cable ends must be prepared as illustrated below.




SENSOR CABLE JUNCTION BOX (OPTION VJB)

Optional Watertight steel NEMA4 (IP55) Junction Boxes with terminal strips are available from Micronics Limited.

**DIMENSIONS
OPTION VJB - JUNCTION BOX**

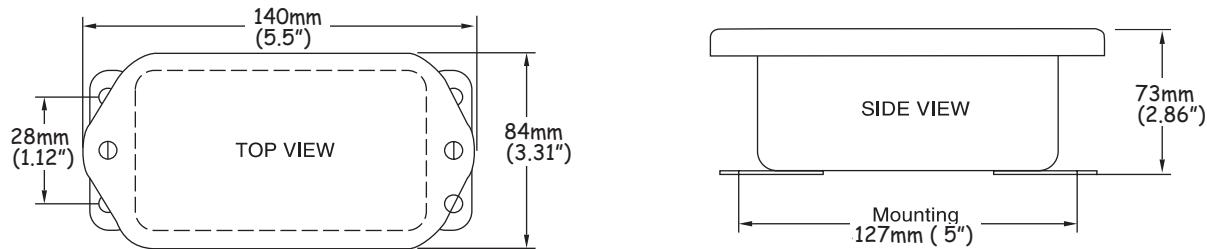



SS PIPE MOUNTING BAND – OPTION VSJ

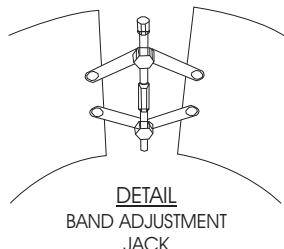

Use optional VSJ stainless steel Pipe Mounting Bands for easy Sensor installation in round pipes.



Each Pipe Band includes:

- ↗ Band Adjustment Jack allowing $\pm 0.5"$ (13 mm) adjustment from the nominal band size
- ↗ Stainless steel bracket for Sensor mounting
- ↗ Pre-drilled for tie wraps (included) to secure Sensor cable

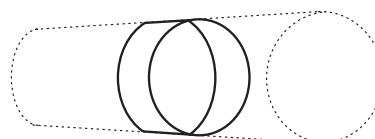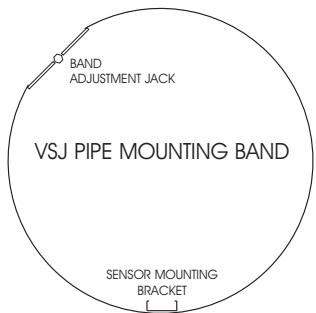

CODE BAND SIZE

VSJ6	6"/150 mm ID pipes
VSJ8	8"/200 mm ID pipes
VSJ10	10"/250 mm ID pipes
VSJ12	12"/300 mm ID pipes
VSJ14	14"/350 mm ID pipes
VSJ15	15"/375 mm ID pipes
VSJ16	16"/400 mm ID pipes
VSJ18	18"/450 mm ID pipes
VSJ20	20"/500 mm ID pipes
VSJ24	24"/600 mm ID pipes
VSJ30	30"/750 mm ID pipes

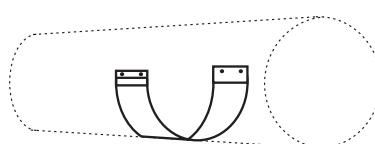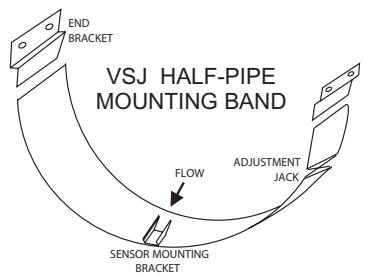


VSJ32-40 32-40" / 800-1000 mm ID pipes
 VSJ42-54 42-54" / 1100-1375 mm ID pipes
 VSJ56-72 56-72" / 1400-1800 mm ID pipes

Mounting Instructions:


Install the stainless steel pipe band with the sensor mounting bracket at the invert (bottom) of the pipe. Ensure that the sensor bracket is parallel to the water surface (check with a level). Mount so the tapered end of the sensor will point upstream and the sensor cable will point downstream. Turn the $1/4"$ adjusting nut clockwise to expand the bracket and secure to the pipe wall by friction fit.

Insert the sensor into the mounting bracket and tie wrap the sensor cable securely to the stainless steel pipe band.

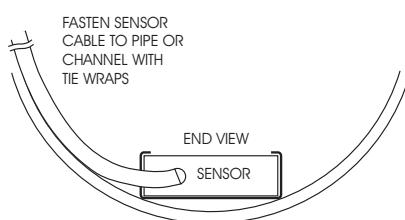

ENCLOSURE HEATER AND THERMOSTAT - Option TH

Instruments can be factory-equipped with an Enclosure Heater and Thermostat or the module can be customer-installed. The Thermostat is factory set to turn ON at 4.5°C (40°F) and OFF at 15.5°C (60°F). Power consumption is 15 Watts.

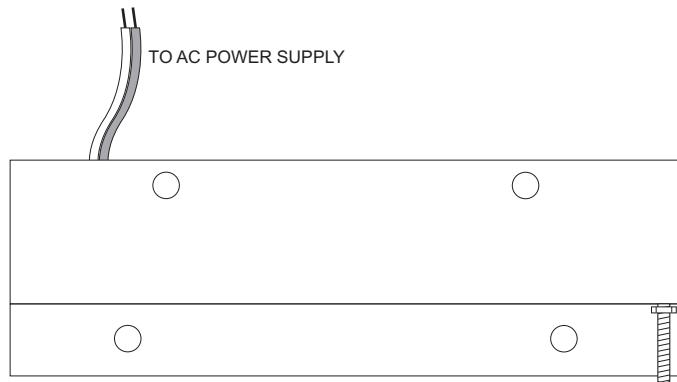

ENCLOSURE SUNSCREEN - Option SCR


Do not mount instrument electronics in direct sunlight. Overheating will reduce the life of electronic components and condensate may form during the heat/cool cycles and cause electrical shorts.

Note:

Exposure to direct sunlight can cause overheating and moisture condensation which will reduce the operating life of electronics.

Protect Instruments from direct sunlight with this iridite finished aluminum sun screen (Micronics Option SCR).

Seal conduit entries with caulking compound to further reduce moisture condensation.

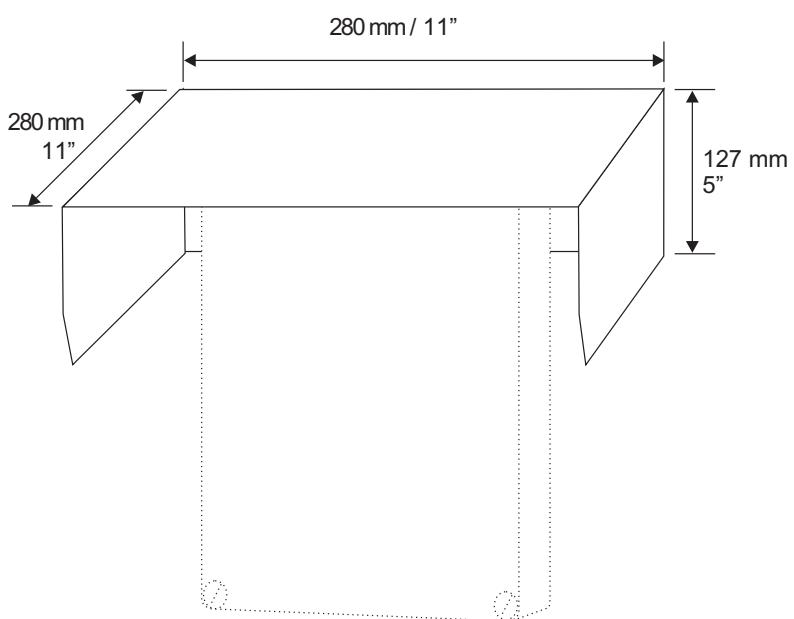

POWER INPUT OPTION 9-32VDC


UF AV5000 Flow Meters may be ordered factory-configured for 9-32VDC power input.

QUICK BENCH TEST:

Connect Sensor as shown below, then Power. Test operation of the UF AV5000 by holding the sensor in one hand and rubbing your thumb or fingers briskly across the face (plastic surface) of the sensor. Allow 15 seconds for the UF AV5000 to process the signal and display a flow value.

CONNECTIONS:

POWER INPUT: Connect 9-32VDC to the + and - terminals. The Power Input GND terminal must be connected to the nearest Ground pole. A 1-amp fuse in line is recommended.

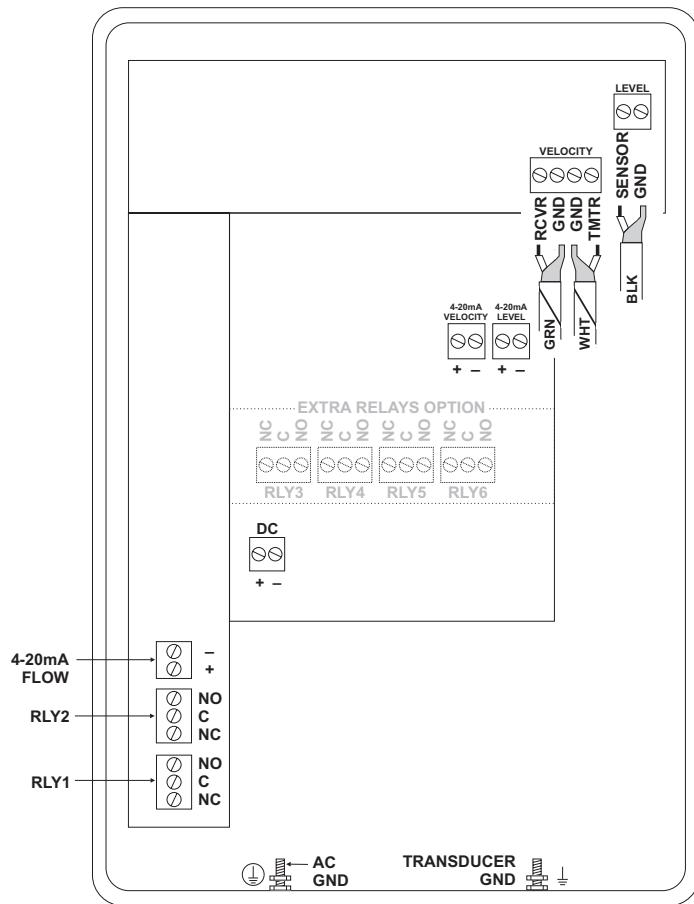

--Data Logging-----	
►Log Site ID	00 99
Mode	Flow Velocity
Set Date	Feb 18/2008 Mar 19/2009
Set Time	11:27:40 12:28:41
Interval	10sec 60min 30min 10min 5min 2min 1min 30sec
Log	Stop Start Delete

DATA LOGGING (Optional)

Setup

Select Data Logging from Menu Selections.

- | | |
|---|--|
| Log Site ID | Enter a number from 00 to 99. The site ID will become part of the downloaded file name to help distinguish downloads from different instruments. Press ✓ to store the setting. |
| Mode | Select Velocity, Level or Flow. Press ✓ to store the setting. |
| Set Date | Press ▲ or ▼ to scroll and select Month, Day and Year. Press ✓ to store the setting. |
| Set Time | Press ▲ or ▼ to select the current time in Hours, Minutes and Seconds. Press ✓ to store the setting. |
| Interval | Press ▲ or ▼ to select the logging interval. Flow rate reading will be stored at each time interval. Press ✓ to store the setting. |
| Note: Press ▼ to Log ► and ▲ or ▼ to Delete and ✓ to delete the log file. Press ► and ▲ or ▼ to Start and ✓ to restart the logger. | |
| Log | Stop, Start or Delete the log file. You <u>MUST</u> delete old file and start a new log to apply any changes that have been made to the Log Site ID, Mode or Interval. |
| View 24-hr formatted Reports on the UF AV5000 display. Press ← from the RUN display to view a formatted flow report from instruments with a built-in data logger. Press ← to pan through Level, Velocity and Flow summaries. Press ↓ to scroll down one day or repeatedly to scroll to a specific date. Up to 365 days can be stored. Newest date will overwrite the oldest. Press ✓ to return to the main display. | |

RETRIEVE LOG FILE

Plug a USB Flash Memory Drive (not supplied by Micronics) into the USB output cable from the instrument. The instrument display will show the message Downloading until the log file is transferred to the memory card and then display Completed. The USB flash drive may be removed.

Download file names will appear in this format:

AVFMU TAGA.LOG
↑ ↑ ↑
MODEL TAG DOWNLOAD

Tag is set according to the Log Site ID entered in the instrument Data Logging menu.

Download letter will be A for the first download from an instrument. B for the second, then C etc. At the letter Z a - character will appear indicating that the maximum number of downloads for that instrument are on the USB flash drive. Older files can be erased or moved from the flash memory drive or a new memory drive can be used.


OPENING LOG FILES

Install Micronics Logger on your PC or laptop. Refer to the Help menu in the program for detailed instructions.

Select File/Open/Instrument Log (.log) to open the log file from your USB flash drive.


SPECIFICATIONS

Electronics Enclosure:	NEMA4X (IP 66), watertight and dust tight, polycarbonate with clear, shatterproof hinged Lexan cover
Accuracy:	Level: $\pm 0.25\%$ of Range Velocity: $\pm 2\%$ of Reading Repeatability: 0.1% F.S., Linearity: 0.1%F.S.
Display:	White, backlit matrix – displays flow rate, totalizer, relay states, operating mode and calibration menu
Programming:	Built-in 5-key calibrator with English, French or Spanish language selection
Power Input:	100-240VAC, 50/60 Hz, (30 W max.) Optional: 9-32VDC (9W max.)
Output:	2Isolated 4-20mA, 1000 ohm load maximum or 2 Isolated 0-5V
Control Relay:	Qty 2, rated 5 ampere SPDT
Temperature Compensation:	Automatic, temperature probe built in to level Sensor
Electrical Surge Protection:	Sensor, 4-20mA, AC power input
Environmental Conditions:	Relative humidity up to 80% -23 to 60°C ambient temperature, maximum 5000 m altitude, pollution degree 4, Installation Category II.Optional Enclosure Heater recommended for condensation protection below -1°C (32°F)

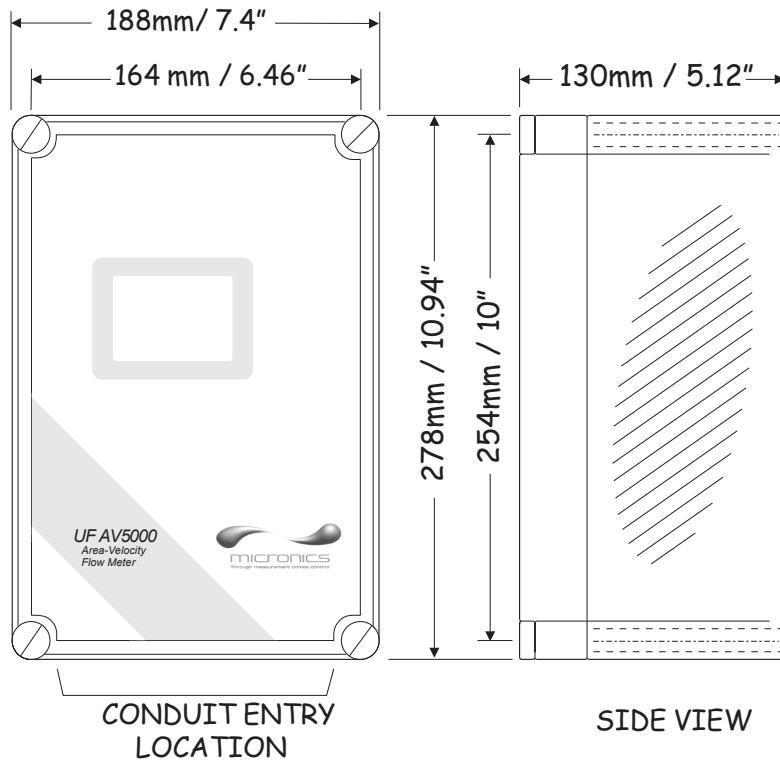


Velocity/Level Sensor QZ02L

Minimum Velocity: 0.03 m/sec (0.1 ft/sec)
Maximum Velocity: 6.2 m/sec (20 ft/sec) [reverse flow to -1.5 m/sec (-5 ft/sec)]
Minimum Head: 25.4 mm. (1 in)
Maximum Head: 4.88 m. (16 ft)
Operating Temperature: -15 to 65°C (5 to 150°F)
Exposed Materials: PVC, epoxy resin, polyurethane, ultem
Sensor Cable: 7.6 m. (25 ft) submersible polyurethane jacket, shielded, 3 coaxial
Hazardous Rating: CSA rated Intrinsically Safe Class I, Groups C,D, Class II, Groups E,F,G
 with optional Intrinsic Safety Barrier

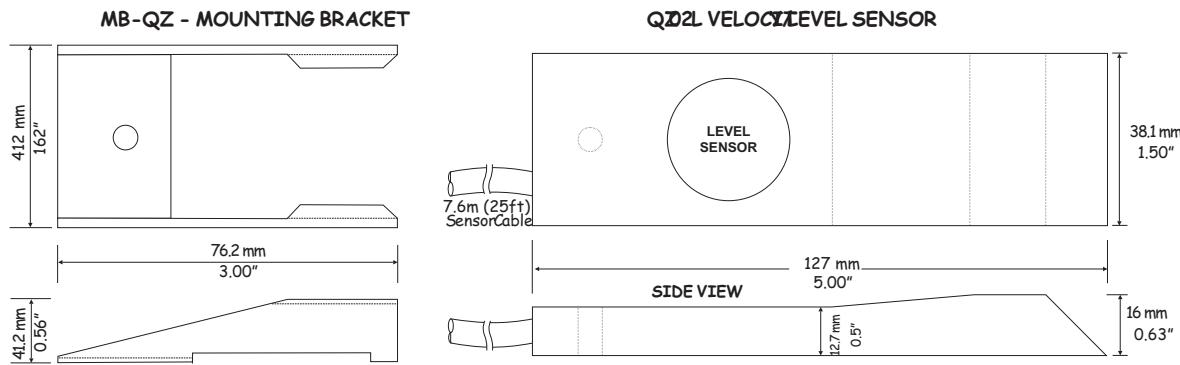

Optional (Velocity only) Sensor QZ02L-DP

Minimum Velocity: 0.03 m/sec (0.1 ft/sec)
Maximum Velocity: 6.2 m/sec (20 ft/sec) [reverse flow to -1.5 m/sec (-5 ft/sec)]
Operating Temperature: -15 to 65°C (5 to 150°F)
Exposed Materials: PVC, epoxy resin, polyurethane, ultem
Sensor Cable: 7.6 m. (25 ft) submersible polyurethane jacket, shielded, 3-coaxial
Hazardous Rating: CSA rated Intrinsically Safe Class I, Groups C,D, Class II, Groups E,F,G, with optional Intrinsic Safety Barrier

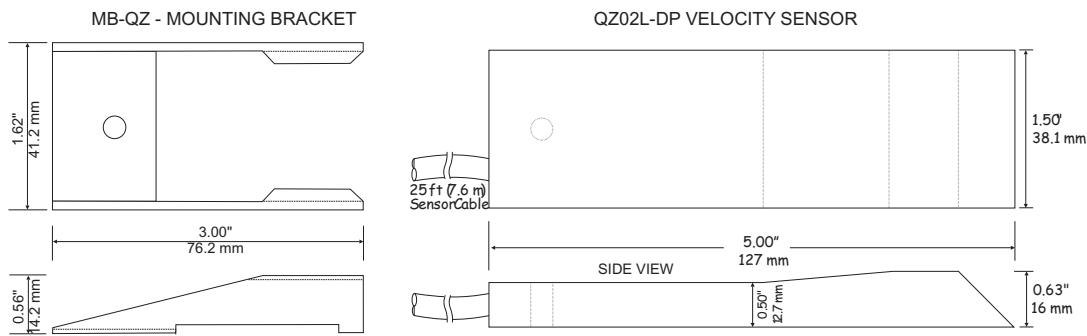

Optional Sensor PZ12-LP

Maximum Range: 3.66m (12 ft)
Minimum Range: 203.2 mm (8")
Beam Angle: 8°
Operating Temperature: -40 to 65°C (-40 to 150°F)
Exposed Materials: Sensor - PVC, Mounting Bracket - 316 Stainless
 Hazardous Rating: CSA rated Intrinsically Safe Class I, Groups C,D,Class II, Groups E,F,G with optional Intrinsic Safety Barrier

